

Collection 2018

ORIGINALS - SPECIALS




ORIGINALS

	the contract of the contract of
Luville Express	4
Molendam	10
Schneewald	24
Ville de Reidy	47
Sledgeholm	67
Figurines Animals	86
Figurines Farm Life	90
Fun with Snow and Ice	91
Santa's	95
Snowman	98
Traveling	100
At the Water	101
Village Life	102
Basics	114
Bridges	115
Fences	116
Fire	117
Traveling	118
Snow and Ice anf Fun	119
Village Life	120
Lanterns	122
Light Chains	125
Spots	128
Adapters and Spare Bulbs	130
Bestsellers	132
Trees with Lights	138
Group of Trees	142
Trees in Barrel	145
Deciduous Trees	147

EFTELING

Efteling	153
SPECIALS	
Villages animated	182
General animated	188
Houses	195
Sceneries	201
Stalls	206
Table pieces	214
Adapters	223

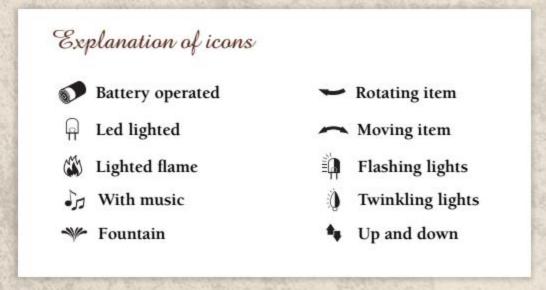

Attention

The items shown and the descriptive specifications are the copyright of Edelman B.V. and may not be copied or reproduced without the required permission. Colour of the photographed models in the catalogue may deviate from the colours of the products due to lighting variations and the photographic session. Whilst every effort is made to ensure accuracy in this catalogue, mistakes do occur.





ORIGINALS

 


SPECIALS


















 1031275
Dock house
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















1031272 Sorting the fish





1031276 Harbor guard





1031273 Flying a kite





1031277 Whale watching





1031270 Seal and pup





1031271 Wallrus and pup

Express





1031278 Harbour ditch



8 718861 30434 3

1031280 Hoist with pulley





1031279 Carrying a boat





1031281 Pulling the boat







1015186 Elsie and Pieter romance





611089 Kissing goodbye





1015185 Dennis is painting

Express









1015130 Eiffel Tower

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1015142 Travelling with car

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)





1015144 Motorcycle

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









Express









612000 Farm shed

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)













1031286 Goat cheese











610009

Chicken farm kukeleku

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)














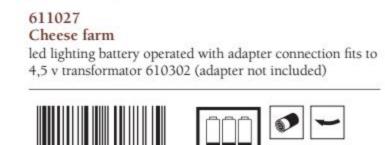

ANIMATED

















 




NEW



1048500 Swan with babies NEW



1048495 Swans



612009 Greenhouse





612038
Skipping rope
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)











NEW

1050630 Church Small











1031284 Dutch church

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1048498 Hotel

















1031285 Bike for rent

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031282 Bicycles, set of 2



1031287 Dutch home

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Molendam











1048499 Beer brewery

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







NEW

1048497 Lifting a barrel





1050631 Market place included 4.5V adapter

















1031289 Cheese market

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









1031290 Wooden clogs





1031291

Stroopwafel market

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









Molendam







1048502 Ice skating pond included 4.5V adapter











ANIMATED

608215 Forest skating pound lighting adapter included AC 12V

















612006 Ice skate service

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)













610045 Stempelpost

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







611095 Ice bridge

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Molendam







1015180 Ice skating with friend





612070 Hendrik on ice skates





1031283 Learn to skate







1048501 Windmill with ice skating pond included 4.5V adapter











ANIMATED

610017 Farmers mill lighting adapter included AC 12V











609092 The dutch tulip mill lighting adapter included AC 12V

ANIMATED





612028 Tourist mill

ANIMATED

lighting adapter included AC 12V





1031288 Dutch mill



















1048488

Entrance to Schneewald

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)















611054 Pretzel market















led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)



 








610034









610115 Christmas market bierstube

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









ANIMATED

1015147

Childrens garden
led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)











Schneewald





1015125 Ski hotel

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)











NEW

ANIMATED

1048484 Apres ski

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)















1048485

Beer house

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)













611053

Ski route







Schneewald





612014 Ski rental

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW











1015127 Skicafe led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)





 


1031298 Piste break









led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1015137 Entry ski alm











1015146 Ski class

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)













NEW

1048486 Childrens ski class









612065 Ski school



609113 Ski jumper, set of 2





608249 Ski class, set of 3



1048481 Fun on a sleigh



9 719961 14692 7

1015177 Andre is skiing





1031295 Snowboarder, set of 2











612066 Rudolph is skiing



1031296 Ski patrol led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)



NEW



1048490 Santa's ski accident







1031297 Ski rescue

1031293 Rescued skier









1031292 Saint bernard





1031294 Ski fall





608290 Chappel

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







NEW

1048482 Holiday ski lodge













NEW

ANIMATED

1048487 Kissing

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









 A

1015134 Camp







Schneewald







1048489 Mountain view point





NEW













1050629 Skiing mountain

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)













ANIMATED

611043 Skating and skiing cave lighting adapter included AC 12V













603038 Ski lift lighting adapter included AC 12V











NEW

ANIMATED

1050628 Cable cart included 4.5V adapter















604011 Ski slope lighting adapter included AC 12V













ANIMATED

1048492 Ski slope included 4.5V adapter













610016 Winter sport mountain lighting adapter included AC 12V













ANIMATED

611032 Kabelbahn mountain lighting adapter included AC 12V















1048494 Dog sleigh

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









A



1015148 Santa swing











1015150 Air balloon

led lighting battery operated with adapter connection fits to $4.5\ v$ transformator 610302 (adapter not included)







ANIMATED

610018 Santa flying lighting adapter included AC 12V









Schneewald





603023 Santa reindeer sledge





ANIMATED





















1046001

Fair ground ferris wheel

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)















ANIMATED

1046002

Fair ground attraction





















610030 Carousel lighting adapter included AC 12V













ANIMATED

1045994 Fair ground train included 4.5V adapter















1045995 Fair ground strongman game











NEW

1045996 Fair ground ball game











NEW

1045993 Fair ground selling balloons





NEW

1045997 Macarons stall













1045998 Candy stall

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











NEW

1045999 Candyfloss stall













1046000 Popcorn stall

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)















1015133

Bistro















1031302

Winery

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031305 Making french wine











NEW

1045987 Stork's nest

















1031309 Music kiosk

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)









 
A

609153 Waterpump









led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1045991 Portrait painting





ANIMATED

610025 Forest swing

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)













610008 Church lighting adapter included AC 12V











610003 Church St Chevalier

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)















1031303 French bakery

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031306

Vintage market led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)



611048 Poulier market

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)

 












led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











NEW

1045992 Beer stall and drinking

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















 
1031308 French cheese market

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1050627

Bakery car



 


1031299 Buying a baguet









led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









ANIMATED

611021 Black smith



















612012 Donkey go





led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







NEW

1045988 Horse stable

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















Horse Riding with girl





Horse riding



Shepherd





1031301 Silo led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







NEW

1045990 Sheep meadow







609090 Farm mill

lighting adapter included AC 12V







ANIMATED

610019 Grain mill

lighting adapter included AC 12V

















1048465 White deers house

led lighting battery operated with adapter connection fits to $4,5\ v$ transformator 610302 (adapter not included)









1031336 Reindeer sleigh

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031324

Little home

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Slegdehølm







1048464

House sitting on the porch led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)

718961 46408









1048469

Putting presents under the christmas tree

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1048467 Hot tub

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Slegdehølm









NEW

1048468 Sauna ritual

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031315 Dressing snowman

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031318 Girl and reindeer



Slegdehølm







1048473 Ice hotel

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)













ANIMATED

1048475 Ice sculpture












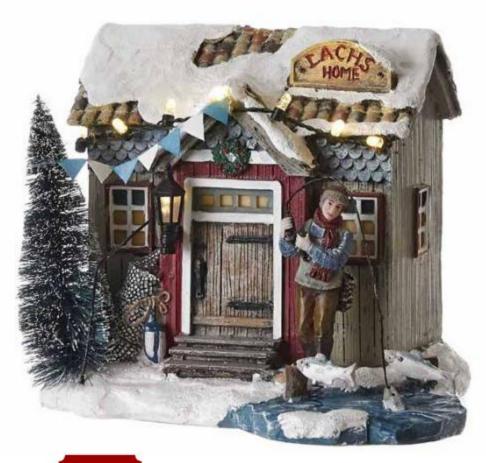




1048463 Ice fishing







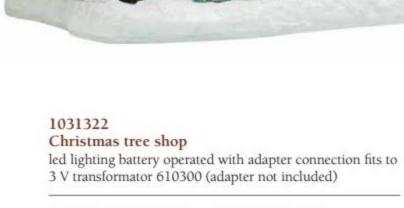








Slegdehølm







 







1031317 Collecting a christmas tree





ANIMATED

1031327 Sint Lucia church









Slegdehølm





1031328 Priest church

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











ANIMATED

1048474 Choir

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)









1031331 Sint Lucia







Slegdehølm





ANIMATED

1031326 Visit Santa

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)









NEW

1048471 Santa with campfire

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1031330 Santa is decorating





ANIMATED

1031323 Deer farm

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)











ANIMATED

1048472

Santa's seesaw

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)















1031311 Track pointer Santa









1048462
Santa trading hats
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







1031313 Reindeer,set of 2











1031337 Reindeer shop

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031319 Madam Fur



1031338 Winter clothes shop

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















1031339 Selling lachs

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031316 Buying lachs



NEW

1048476 Foodtruck Coffee

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)













1048477 Apple candy stall

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1048478 Chips stall







Slegdehølm







1048479

Christmas candle stall

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1048480

Christmas cookie stall







Slegdehølm







led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1048470 Dog sleigh





1031332

Bonfire







Slegdehølm







1031334 Tipi
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)



1031320 Karen and Eva with flying star



1031310 Swedish fire led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Slegdehølm









1048466 Bear cave

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1031329 Fishing



1031321 Fun with snow







Iglo camping led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















Bear and cub, set of 2





Polar bear







Wolve, set of 2











1031313 Reindeer, set of 2







612081 Deer, set of 2





603044 Deer drinking







1048495 Swans





1031292 Saint Bernard











1031271 Wallrus and pup



1031270 Seal and pup











1031312 Bear and cub, set of 2







1031314 Wolve, set of 2





612079 Cow and bull, set of 2







1015189 Pig and piglets, set of 2







612012 Donkey go







1045987 Stork's nest



1031300 Shepherd



9 712700 92202 0

609100 Farm scenery, set of 4

Farm Life





1015180 Ice skating with friend



612070 Hendrik on ice skates





1031283 Learn to skate



1048481 Fun on a sleigh





610064 Rob and Tom's snowfight







1031321 Fun with snow



611053
Ski route
led lighting battery operated with adapter connection fits
to 3 V transformator 610300 (adapter not included)













609113 Ski jumper, set of 2





612065 Ski school





608249 Ski class, set of 3





1031295 Snowboarder, set of 2





1015177 Andre is skiiing





612066 Rudolph skiing

Fun with Snow and Oce







1031298 Piste break





1031293 Rescued skier





1031297 Ski rescue





1031294 Ski fall

Fun with Snow and Oce

















1031330 Santa is decorating





604023 Santa skiing















603024 Santa with gifts





602568 Santa with deer







603023 Santa reindeer sledge



612083 Santa and deers





610041 Reindeer teasing Santa







1048490 Santa's ski accident





1015135 Presents from Santa





1031315
Dressing snowman
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







611106
Snowman lighted
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)











1015176 Dog teasing snowman





610063 Melty the snowman





608247 Tom and grandfather in the snow





1015186 Elsie and Pieter romance





611089 Kissing goodbye













1031276 Harbor guard

10312 Harbo









8 718861 30434 3

1031280 Hoist with pulley



1031281 Pulling the boat



1031279 Carrying a boat

At the water

















1048503 Village people set NEW



1048504 Village people set









1050624 Village people set





1031333 Plundering the christmas tree

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











NEW

1048469 Putting presents under the christmas tree











1031318 Girl and reindeer





1015175 Carrying a tree







1031329 Fishing





1031317 Collecting a christmas tree







1031319 Madam Fur



 


1031316 Buying lachs













1031273 Flying a kite







 
1031320 Karen and Eva with flying star







1015185 Dennis is painting





NEW

1048497 Lifting a barrel







1031299 Buying a baguet





603067 Ann and Hein building







1031331 Sint Lucia led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)













1048491 Forest campfire led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











609132
Lantern lighter
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











605135 Lawn mat with snow











600366 Stone bridge with deer



1035464
Bridge with lights
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







1035465 Stone bridge







611187 Bristle trees on stone wall led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)













612113 Lighted fence led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











612114 Lighted fence led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









612115 Lighted fence led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







605052 Wooden fence





 
611192 Lighted gate led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









609184 Fire chasing

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1015152 Chimenea

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















1048510 Bonfire

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







1015153

Fire basket

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









1031310 Swedish fire

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











610093 Little fire

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







610040

A

(3)

Nature campfire

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















1031282 Bicycles, set of 2



611193
Traffic light, set of 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1031311 Track pointer Santa









1015449 Wooden log fence



611195
Birdcage with old English streetlantern
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







 








609153 Waterpump



600389 Village well











605149 Lantern, set of 4

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







605127 Gas street lantern, set of 4

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







NEW

1048509 Lanterns with Santa hat

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Lanterns





610180 Wooden street lantern, set of 4 led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











612051 Street lantern on foot, set of 3 led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







612118 lantern, set of 2 led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











605132
Old English street lantern, set 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







612052
Classic lantern on foot, set of 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









1025887
24 warm white lights, steady
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)









1025881
36 warm white lights, steady
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







1025883 12 warm white lights, steady led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Light Chains









1025880
36 warm white lights, chasing
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)

 






610120 Chinese lantern light chain multicolour led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)





605091
36 Mini white lights, chasing
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)











1025877
36 warm white lights, twinkling
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)









1025879
36 white lights, twinkling
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)









1025876
36 mulitcolour lights, twinkling
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)

 




















1025886
Spot light blue, set of 3
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)







1025884
Spot light multicolour, set of 3
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)







Spots





610155
Spot light warm white, set of 2
led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









1015167
Spot light blue, set of 2
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)







1015168
Spot light multicolour, set of 2
led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)







Spots





605523 Replacement bulb E10 12V, set of 2





609178 Spare bulb warm white, set of 2





609179 Spare bulb warm white, set of 4











609180 Spare bulb warm white, set of 6



609177
Light bulb
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)







610153 Chain of 3 light bulbs adapter included dc 4,5v







Adapters and Spare Bulbs





605004 Bristle tree mini H 7,5 cm, set of 4





605003 Bristle tree H 10 cm, set of 2





605002 Bristle tree H 15 cm







605001 Bristle tree H 23 cm





605000 Bristle tree H 30,5 cm





608319 Bristle tree assorted, set of 9









605006 Bristle tree assorted, set of 12



 
605005 Bristle tree assorted, set of 21







1025898 Bristle tree on log assorted, set of 6





605020 Evergreen tree H 30,5 cm







608318 Evergreen tree assored, set of 9





609176 Tree evergreen assorted, set of 12





609158 Evergreen tree assorted, set of 21







608320 Tree white assorted, set of 9





609159 Tree white assorted, set of 21









1025908 Frosted tree with lights H 30 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)





 


1025909 Frosted tree with lights H 22,5 cm, set of 2 led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)















Trees with Lights















1025905
Tree with lights H 30 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







1025906
Tree with lights H 22,5 cm, set of 2
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)





1025907
Tree with lights H 14,5 cm, set of 3
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











605143
Christmas tree with lights H 23 cm
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)













605142
Christmas tree with lights H 15 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







608312 Christmas tree with lights H 15 cm, set of 3 led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)













608311
Tree with lights H 23 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)







608310
Tree with lights H 15 cm, set of 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1025894 3 Snowy trees on base white light H 12 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1025893 3 Snowy trees on base white light H 19 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











1025896 3 Trees on base multicolour light H 12 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









1025895 3 Trees on base multicolour light H 19 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









1025897 5 Trees on base multicolour lights H 20,5 cm led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









Group of Trees





609165
3 Trees on base with white light H 19 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)









609164
6 Trees on base with white light H 19 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)









609162 6 Trees base multicolor light fibre optic H 19 cm led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)







Group of Trees





612055
Buxus bush in barrel H 7 cm, set of 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







--



1025899
Buxus tree in a barrel H 8,5 cm, set of 2
led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







n P

Trees in Barrel





612054 Buxus bush in barrel H 7 cm, set of 2





612103 Buxus tree in barrel H 10 cm, set of 2







609183
Lighted tree with multicolour light H 23 cm
led lighting battery operated with adapter connection fits to
3 V transformator 610300 (adapter not included)



 








1025901 Mountain pine H 16 cm





1025902 Mountain pine H 23 cm





1025903 Mountain pine H 30 cm







605009 Mountain pine H 10 cm, set of 2





1025900 Moutain pine H 12 cm, set of 2







605050 Winter alaska pine H 15 cm





605049 Winter alaska pine H 23 cm





605048 Winter alaska pine H 30,5 cm







NEW

1048505 Winter village tree green H 15 cm





NEW

1048506 Winter village tree snow H 15 cm







NEW

1048507 Winter village tree green H 23 cm





NEW

1048508 Winter village tree snow H 23 cm









1050625 Mountain spruce green H 15 cm





NEW

 
1050626 Mountain spruce snow H 15 cm







1031344 Willow tree H 15 cm






1031343 Willow tree H 22,5 cm







 1031345 Tree H 18 cm





1031346 Tree H 23 cm







381897 Sprookjesbos





381892 Kleine boodschap





1001359 Prullenmand





 




381650 Prullenbak



1036354 Brug Tobbelientje



1036355 Verlichte boom H 16 cm

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)







Sprookjesbos



1036362 Wegwzijer





1036363 Strohuis moeder geit



 


1036361 Hek





381651 Paddenstoel





1001356 Zweefmolen

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









1001357 De Magische Klok, set van 2





1008019 Heraut, set van 2





1001358 Holle Bolle Gijs





 
381940 Holle Bolle Gijs






















381887 Moeder geit






1008014 Zeven geitjes tafel



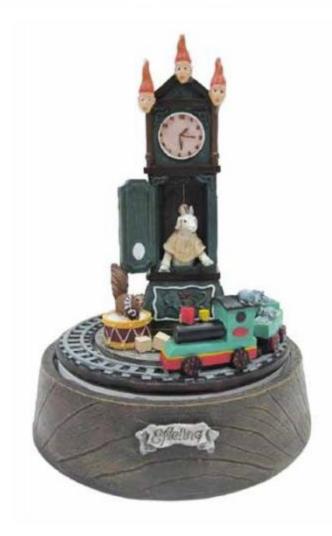

 1008016 Zeven geitjes led lighting battery operated with adapter connection fits to











381545 Kasteel van Doornroosje

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









381924 Poort Doornroosje





1001362 De Tuinman en de Fakir





1001361 De Fakir





381884

Huis van Repelsteeltje led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









1036360 Ridder Repelsteeltje





1008013 Repelsteeltje





381646

Huis van Roodkapje led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)







381500 Roodkapje





381885
Huis van Vrouw Holle
led lighting battery operated with adapter connection fits to
4,5 v transformator 610302 (adapter not included)









381898 Waterput Vrouw Holle





381938

Toren van Raponsje

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)











1008015

Indische waterlelie

led lighting battery operated with adapter connection fits to 4.5~v transformator 610302 (adapter not included)













1008017 Kleding van de Keizer





1008018

Huis van Sneeuwwitje led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1014416 Huis van Gepetto





1014418 De Vos en de Kat







led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)









NEW

1041553 Kikkerkoning





381895 Ezeltje strekje





381888 Tobbelientje





1001363 Klein Duimpje en de Reus





1008012 Langnek





NEW

1014419 Sprookjesboom





381937 Muziek kabouter in holle boom


led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)









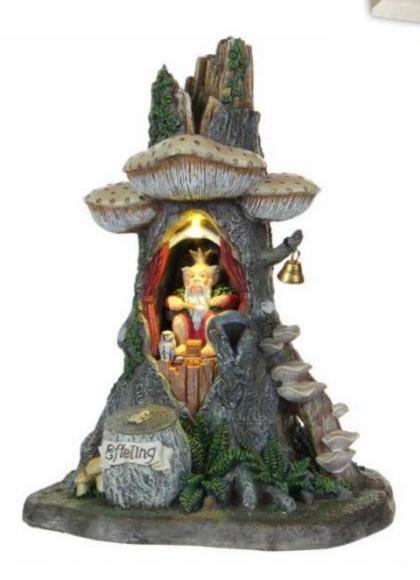

381939 Trollenkoning

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)












381645 Huis van de Kabouters

led lighting battery operated with adapter connection fits to 4,5 v transformator 610302 (adapter not included)







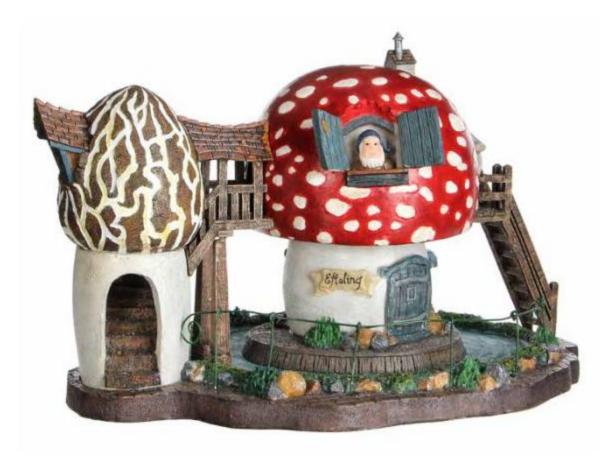

381882 Kabouterhuis

led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)











381942 Schrijf kabouter





1036352 Dansende Kabouter





1036358 Kabouter in de boot





381502 Vissende kabouter









381881 Huis van Hans en Grietje led lighting battery operated with adapter connection fits to 3 V transformator 610300 (adapter not included)








1036356 Hans en Grietje




1036353 Oven van Hans en Grietje



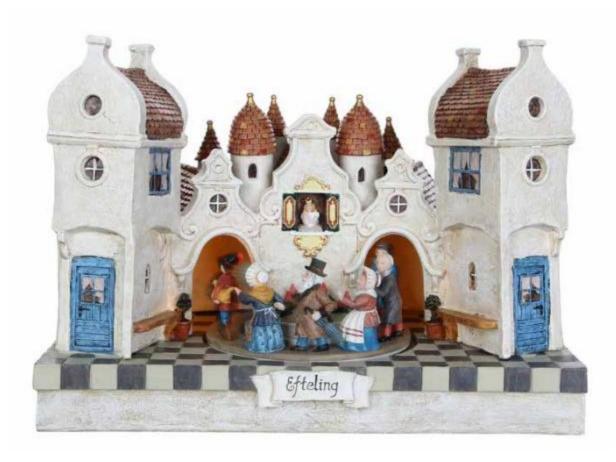

 381925 Verlichte straat zwaan kleef lighting adapter included AC 12V







1036357 De Ganzenhoedster






NEW

1036359 Bremer stadsmuzikanten



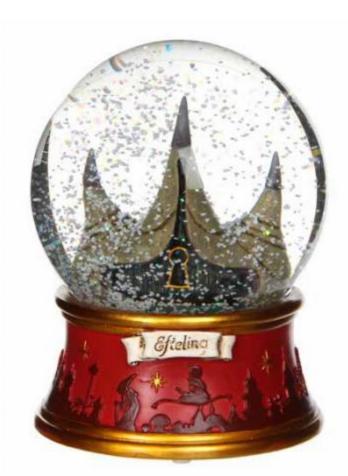

1009187 Waterbal Efteling





1004955 Waterbal Indische waterlelie





1027242 Muzikale paddenstoel







1014417 Pardoes





1014420 Sprookjessprokkelaar













1025866

Town with children playing, 3 assorted with adapter connection fits to transformer 611132 (adapter not included)













ANIMATED

1025849 Christmas house, 2 assorted

with adapter connection fits to transformer 611132 (adapter not included)

















1045431 Village scenery with river











NEW

ANIMATED

1045421 Winter scenery, 2 assorted













ANIMATED

1045436 Christmas village scenery, 2 assorted











NEW

ANIMATED

1045422 Winter scenery, 2 assorted













ANIMATED

1045458 Ice skating scenery









1015630 Christmas village, 2 assorted with adapter connection fits to transformer 611132 (adapter not included)













1013993 Christmas village with train adapter included dc 4,5v









ANIMATED

1045426 Winter village scenery













ANIMATED

1045437 Village scenery with christmas tree adapter included dc 4,5v

















1015628 Gazebo, 2 assorted









ANIMATED

1045450 Skiing scenery













1045451 Skiing scenery









NEW

ANIMATED

1045434 Village scenery with ski slope















1045452 Christmas scenery











ANIMATED

1045425 Light house scenery











1045424 Windmill scenery









1014003

Village with ferris wheel with adapter connection fits to transformer 611132 (adapter not included)















1045453 Christmas tree scenery adapter included dc 4,5v









ANIMATED

1045454 Fountain scenery adapter included dc 4,5v











1045435 Ski village scenery adapter included dc 4,5v







ANIMATED

1015613 Ski slope adapter included dc 4,5v









1025869 Ski fun adapter included dc 4,5v







NEW

ANIMATED

1045440 Ski slope scenery adapter included dc 4,5v





A













1036022 Christmas house, 5 assorted















1025863 Town, 4 assorted





 
























1045447 German house, 3 assorted















1045448 German house, 3 assorted







NEW

1045449 German Church, 2 assorted















1028573 Nordic house, 3 assorted







1028578 Nordic house, 3 assorted





1028579 Nordic church, 2 assorted







Houses





1028572 Holland house, 3 assorted









1028575 Holland house, 3 assorted









1028576 Holland church, 2 assorted









1028577 Holland windmill, 2 assorted













1045441 Christmas scenery, 3 assorted



















NEW

1045419 Christmas scenery, 4 assorted





NEW

1045420 Christmas scenery, 4 assorted







Sceneries













1025845 Christmas scenery, 4 assorted







1025846 Christmas scenery, 2 assorted







1035252 Winter scenery, 4 assorted







Sceneries





1014005 Christmas scenery, 4 assorted











612085 Winter scenery, 4 assorted











NEW

1045439 Christmas scenery, 3 assorted







Sceneries











1045455 Forest scenery, 2 assorted











1028580 Christmas scenery, 4 assorted











Children on swing, 2 assorted

ANIMATED

1025872













ANIMATED

1045456 Singing carols scenery, 2 assorted















1045446 German market, 3 assorted







Stalls





1028581 Nordic market, 3 assorted









1028582 Holland market, 3 assorted















1035249 Stall, 3 assorted









1028583 Christmas market, 3 assorted







NEW

1045412 Christmas market, 3 assorted



























1045413 Christmas stall, 3 assorted









1045438 Market stall, 3 assorted







NEW

1045460 Christmas stall, 3 assorted







Stalls





1013999 Tree shop with adapter connection fits to transformer 611132 (adapter not included)









ANIMATED

612137 Village fair scenery, 3 assorted with adapter connection fits to transformer 611132 (adapter not included)

















1052627 Santa's cookie shop









NEW

1052628 Santa's tree shop













1025861 Market stall christmas trees, 2 assorted with adapter connection fits to transformer 611132 (adapter not included)









1025862 Market stall trees and florist, 2 assorted with adapter connection fits to transformer 611132 (adapter not included)











1045444 Tree shop scenery, 3 assorted Pallet display











Santa and snowman, 2 assorted









Santa with tree, 2 assorted













1045430 Ball christmas silver red gold, 3 assorted













ANIMATED

1035428 Ball with christmas scenery, 2 assorted















1015629 Box with scenery, 2 assorted















ANIMATED

1045443 Ball christmas red green, 2 assorted Pallet display













1025867 Christmas tree with train

with adapter connection fits to transformer 611132 (adapter not included)











1013975 Beetle, 2 assorted













1013976 Truck, 2 assorted









1050618 Van red gold, 2 assorted













ANIMATED

1045429 Santa's van red green, 2 assorted













1045428 Santa's plane red with text "Merry Christmas" in LED light on propellor









1025852 Santa driving a beetle











1045415 Santa in car red











1045414 Santa on truck red with steam effect, with music and sound sensor











1045416

Santa in train red with steam effect, with music and sound sensor













611132 Adaptor





811132 Adaptor

